

GLENSOUND
ELECTRONICS LTD

GS-TBMM001

TALKBACK MONITOR MIXER SUBRACK

PRODUCT DETAILS

6 BROOKS PLACE, MAIDSTONE, KENT, ME14 1HE. ENGLAND.
Visit our Website at www.glensound.co.uk

TEL: +44 (0) 1622 753020
+44 (0) 1622 753662
FAX: +44 (0) 1622 762330

IMPORTANT SAFETY INSTRUCTIONS

Read this safety sheet prior to installation or initial use. This generic safety sheet covers multiple product configurations across our range. The full operating & installation manual and model-specific technical specifications are available online at: **www.glensound.com**

Glensound
Keeps Working



DANGEROUS VOLTAGE: This symbol is intended to warn that dangerous voltages within the product are present and constitute a risk of electric shock.



IMPORTANT INSTRUCTIONS: This symbol is intended to highlight that there are important operating, installation, and maintenance instructions in the literature accompanying this unit.




THIS UNIT MUST BE EARTHED (Class I Mains Models):
English: This symbol highlights that the equipment must have a valid earth connection with the protective earthing conductor.
Danish: *Apparatets stikprop skal tilsluttes en stikkontakt med jord som giver forbindelse til stikproppens jord.*
Finnish: *Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan.*
Norwegian: *Apparatet må tilkoples jordet stikkontakt.*
Swedish: *Apparaten skall anslutas till jordat uttag.*



CAUTION – SHOCK HAZARD: DISCONNECT ALL POWER SOURCES: This symbol warns that the product can be energised simultaneously from more than one power source (e.g., dual AC mains supplies, external DC power, and/or PoE). Care must be taken if accessing internal components. Ensure that ALL connected power supplies are fully disconnected.

1. **Read & Keep Instructions:** Read these instructions, keep these instructions, heed all warnings, and follow all instructions.
2. **Indoor Use & Moisture:** Unless otherwise specified in the model-specific manual, this product is intended for indoor use only. Do not use this apparatus near water, and do not expose this product to rain or moisture.
3. **Ambient Temperature:** The intended ambient operating temperature of this product is 0°C to 40°C (or 0°C to 50°C where specified in the model-specific technical specifications in the online user manual).
4. **Cleaning & Heat Sources:** Clean only with a dry cloth. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
5. **Cable & Cord Protection:** Protect all power cords and network cables from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
6. **Attachments & Lightning:** Only use attachments/accessories specified or supplied by the manufacturer. Unplug this apparatus during lightning storms or when unused for long periods of time.
7. **Servicing & No User-Serviceable Parts:** The product contains no user-serviceable parts and must not be disassembled or modified in any way. Doing so could result in personal injury and/or product failure. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when a power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
8. **Professional Environment:** This equipment is not suitable for use in locations where children are likely to be present.

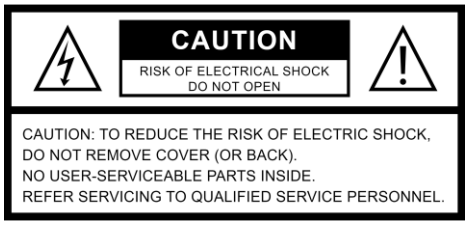

WARNING:

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

POWER SUPPLY & DISCONNECT INSTRUCTIONS (APPLICABLE BY MODEL CONFIGURATION)

9. **Simultaneous / Redundant Power Sources (Mains, DC & PoE):** Depending on the model, this product may be powered by a single source or simultaneously by multiple redundant power sources (dual AC mains inlets, an AC mains inlet, an external DC power input, and/or Power over Ethernet [PoE]). Disconnecting a single power lead will NOT isolate the unit if another power source remains connected. To completely de-energize the equipment, unplug ALL connected AC mains cords, DC barrel jack/external DC connectors, and PoE RJ45/etherCON network cables.
10. **AC Mains Disconnect Devices (Single or Dual IEC Inlets):** Where AC mains inlets are fitted, the mains plug(s) and rear-panel IEC appliance coupler(s) serve as the disconnect device(s). On dual-mains models, both mains' cords must be unplugged to isolate the unit from AC mains power. The socket-outlet(s) used for mains power must be installed near the equipment and be easily accessible.
11. **Plug Grounding & Polarization (AC Mains Models):** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has 2 blades with one wider than the other. A grounding-type plug has 2 blades and a third grounding prong provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
12. **Approved Detachable Earthed Mains Cords (Class I AC Mains Models):** Use only approved detachable 3-core earthed mains cords (minimum H05VV-F 3G0.75 mm² with IEC 60320-1 C13 connector) rated for the country of installation: • United Kingdom: Use a BS 1363-1 approved moulded plug fitted with a 5 A ASTA-approved BS 1362 fuse. • European Union: Use a CEE 7/7 (Schuko/French) earthed plug. • Denmark: When connecting to wall socket-outlets in Denmark, use an approved 3-pin earthed plug complying with DS 60884-2-D1 (Standard Sheet DK 2-1a) to ensure protective earthing is maintained. • USA/Canada: Use a UL-listed / CSA-certified 3-conductor grounding power cord [minimum 18 AWG, SVT/SJT] with a NEMA 5-15P plug. • All other regions: Use a nationally safety-approved 3-core earthed mains cord rated for the country of installation.
13. **Internal Primary Fusing & Neutral Fusing Warning (AC Mains Models – Service Personnel Only):** Internal primary fuse(s) are located between the Live terminal of the IEC inlet and the Live input of the power supply and should only be changed by a qualified service engineer using a correctly rated replacement as specified in the product handbook. WARNING – Neutral Fusing: Because the AC mains plug may be reversible in some electrical distribution systems, the internal primary fuse may be located in the neutral conductor. Always disconnect all AC mains power cords completely from the IEC inlet(s) to de-energize all phase conductors before opening the enclosure or servicing the unit.
14. **Power over Ethernet (PoE) Models:** Unplugging the RJ45 / etherCON network cable disconnects PoE power from the unit. The Ethernet cable intended to be connected to the unit is for indoor building routing only and must not exit the building structure without appropriate primary surge protection.
15. **External DC / USB Power Input Models:** Connect only the manufacturer-supplied AC/DC power adaptor (where provided), or a safety-approved external DC or USB power supply complying with BS EN IEC 62368-1 (classified as ES1 and PS2/Limited Power Source [LPS]) that matches the voltage, minimum current rating, and pin polarity marked adjacent to the DC/USB input connector or specified in the product manual. The external power adaptor plug and the DC/USB input connector serve as the DC disconnect devices and must remain readily accessible; unplugging the DC/USB connector disconnects external DC power only and will not isolate the unit if AC mains or PoE remains connected.

INSTALLATION, THERMAL, MECHANICAL & OPTICAL SAFETY (APPLICABLE BY MODEL CONFIGURATION)

16. **Ventilation & Sealed Heatsink Enclosures:** Do not block any ventilation openings; install in accordance with the manufacturer's instructions. On models where the aluminum enclosure acts as the units heatsink, do not cover the unit or speaker grille with soft furnishings, cloths, or curtains, and allow free airflow around the housing.
17. **19-Inch Equipment Rack Installation (Rack-Mount Models):** Rack-mounted models are designed for stationary installation in a standard 19-inch equipment rack. Secure the unit to the front rack rails using all four mounting holes on the integral rack ears with appropriate rack screws (e.g., M6 screws and cage nuts). Ensure that ventilation openings on the chassis are not obstructed by rack walls or cabling.
18. **Carts, Stands, Brackets & Tip-Over Hazard:** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
19. **Optical SFP Transceiver Modules (Where fitted):** Any optical SFP transceiver modules installed in this product must be certified Class 1 Laser Products in accordance with IEC/EN 60825-1. Do not look directly into open optical ports or fiber-optic cable ends while the equipment is energized.





Disposal (WEEE): the crossed-out wheeled bin symbol means this product must not be disposed of with household waste. Take it to an approved electrical and electronic equipment recycling point, or contact Glensound for advice.
Declaration of conformity: Glensound declares that this product complies with the applicable UK and EU legislation. The full declaration of conformity is available at www.glensound.com.
Manufacturer: Glensound Electronics Ltd, The Design Buildings, 6 Brooks Place, Maidstone, Kent, ME14 1HE, UK · Tel: +44 (0)1622 753662 · Email: sales@glensound.com · www.glensound.com

GLENSOUND ELECTRONICS LTD

GS-TBMM001 *TALKBACK MONITOR MIXER* *HANDBOOK CONTENTS*


DATE 25/10/07 *WP06-366* *ISSUE No. 1*


	DESCRIPTION	DRAWING No.
1.	GS-TBMM001 Panel Views	A2-15980
2.	GS-TBMM001 Block Diagram	A4-15998
3.	GSU83 Inputs Circuit Diagram	A4-16000
4.	GSU83 Outputs Circuit Diagram	A4-16002
5.	GSU83 Pic Circuit Diagram	A4-16004
6.	GSU84 Select & Mix Circuit Diagram	A2-16006

GLENSOUND ELECTRONICS LTD.
6 BROOKS PLACE, MAIDSTONE, KENT, ME14 1HE, ENGLAND

Tel: +44 (0) 1622 753020
+44 (0) 1622 753662
Fax: +44 (0) 1622 762330

REAR VIEW

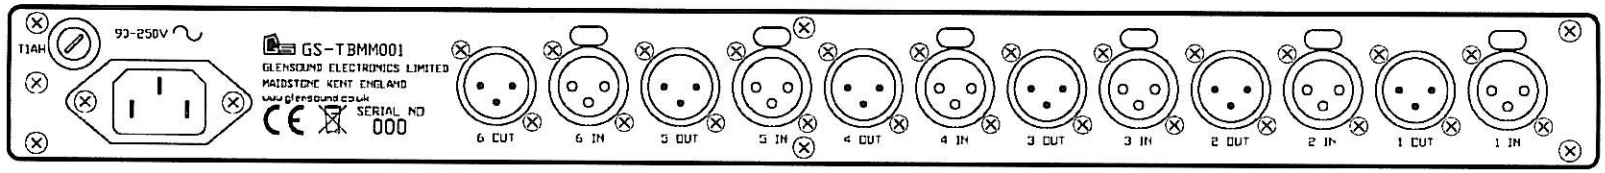

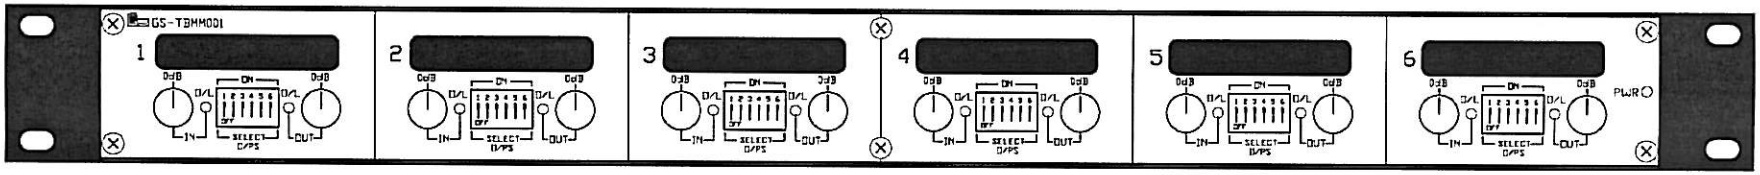


FRONT VIEW


© 2007

GLENSOUND ELECTRONICS LTD

GS-TBMM001 PANEL VIEWS

ISSUE	DATE	DRAWING NUMBER
1	05/10/07	A2-15980
		DRAWN BY: CJH
		ORIGINALLY DRAWN USING AUTOTRAX

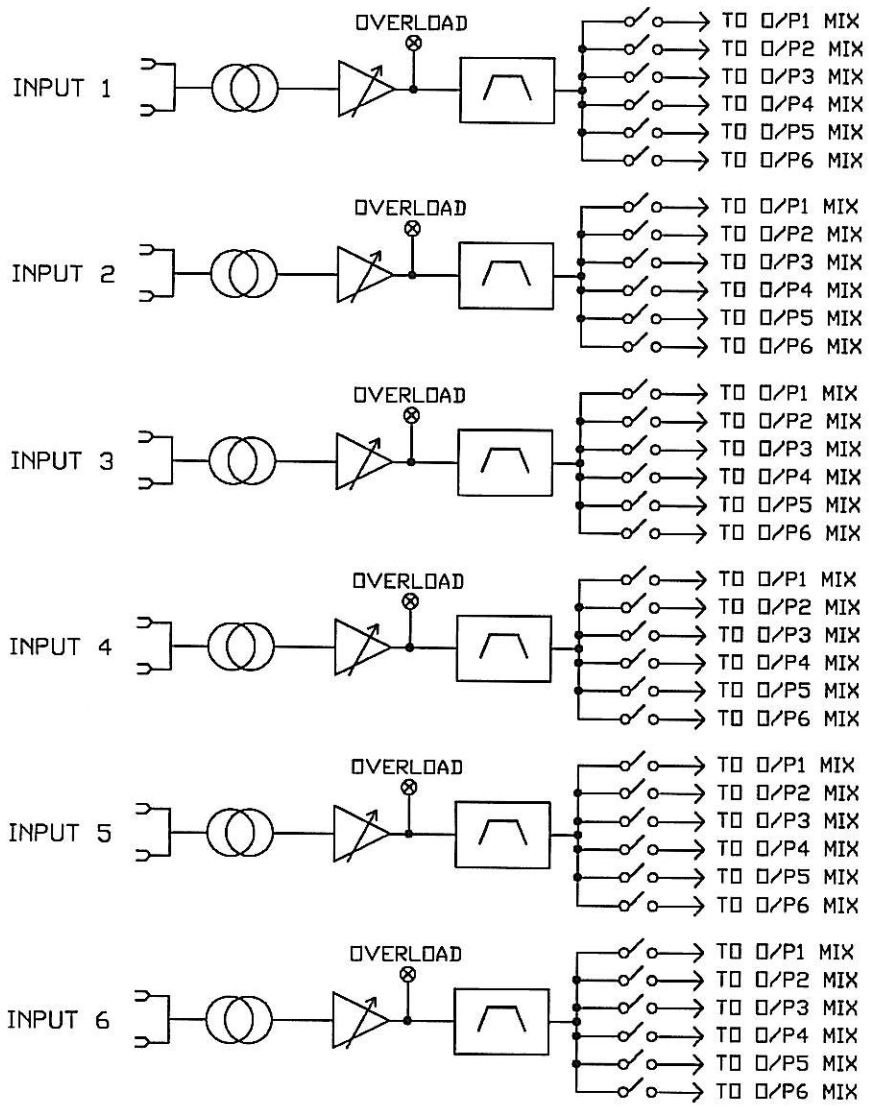

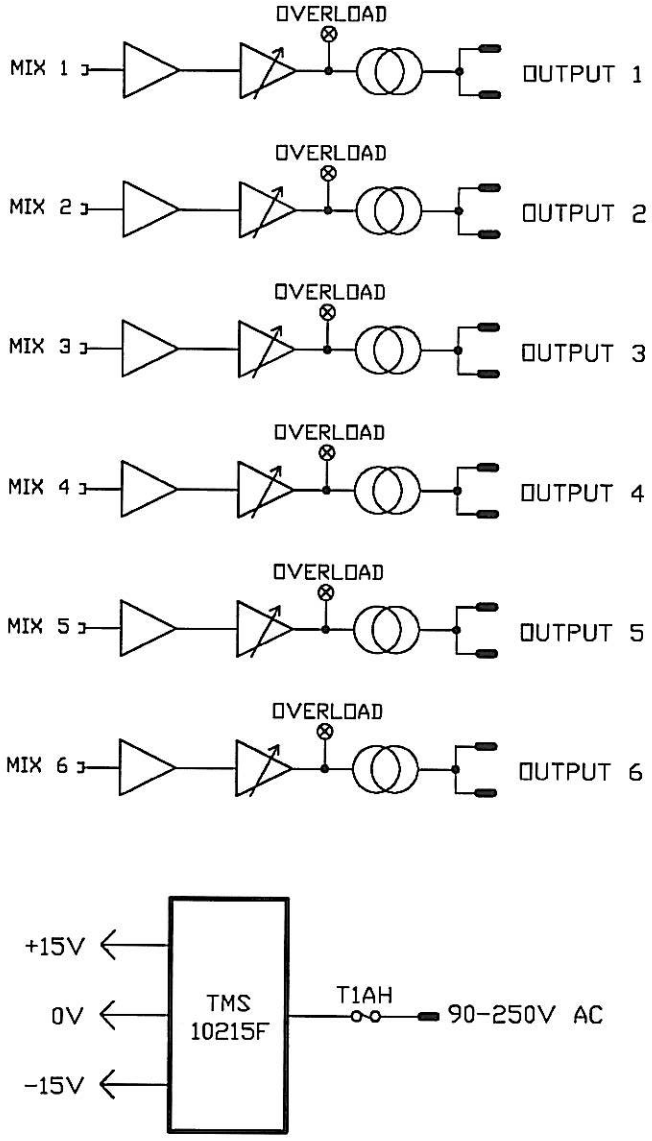

© 2007

GLENSOUND
ELECTRONICS LTD

ISSUE	DATE
1	10/10/07


TALKBACK MONITOR
MIXER BLOCK
DIAGRAM

DRAWING NUMBER

A4-15998

DRAWN BY	CJH

ORIGINALLY DRAWN USING AUTOTRAX

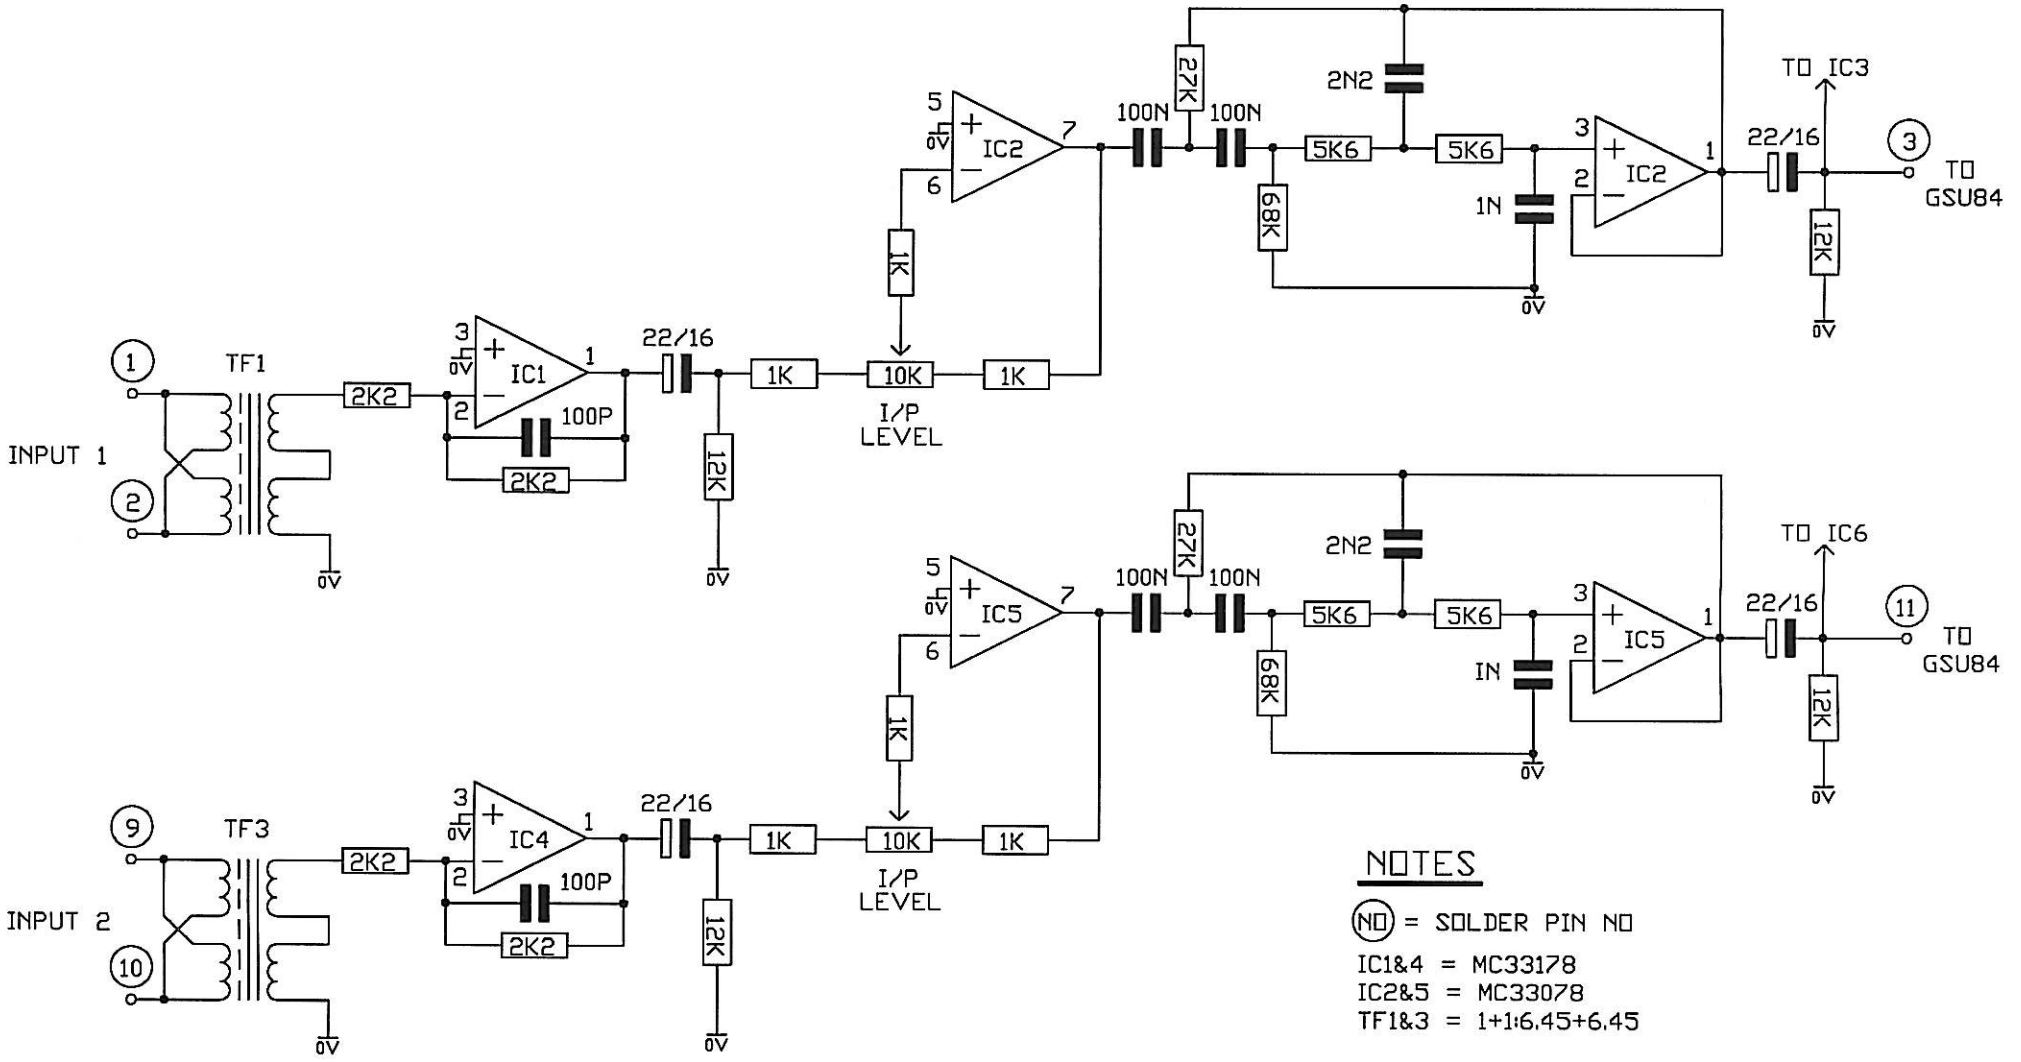

NOTES

(NO) = SOLDER PIN NO


IC1&4 = MC33178
IC2&5 = MC33078
TF1&3 = 1+1:6.45+6.45

© 2007

GLENSOUND ELECTRONICS LTD

GSU83 INPUTS CIRCUIT DIAGRAM

ISSUE	DATE	DRAWING NUMBER
1	12/10/07	A4-16000
		ORIGINALLY DRAWN USING AUTOTRAX

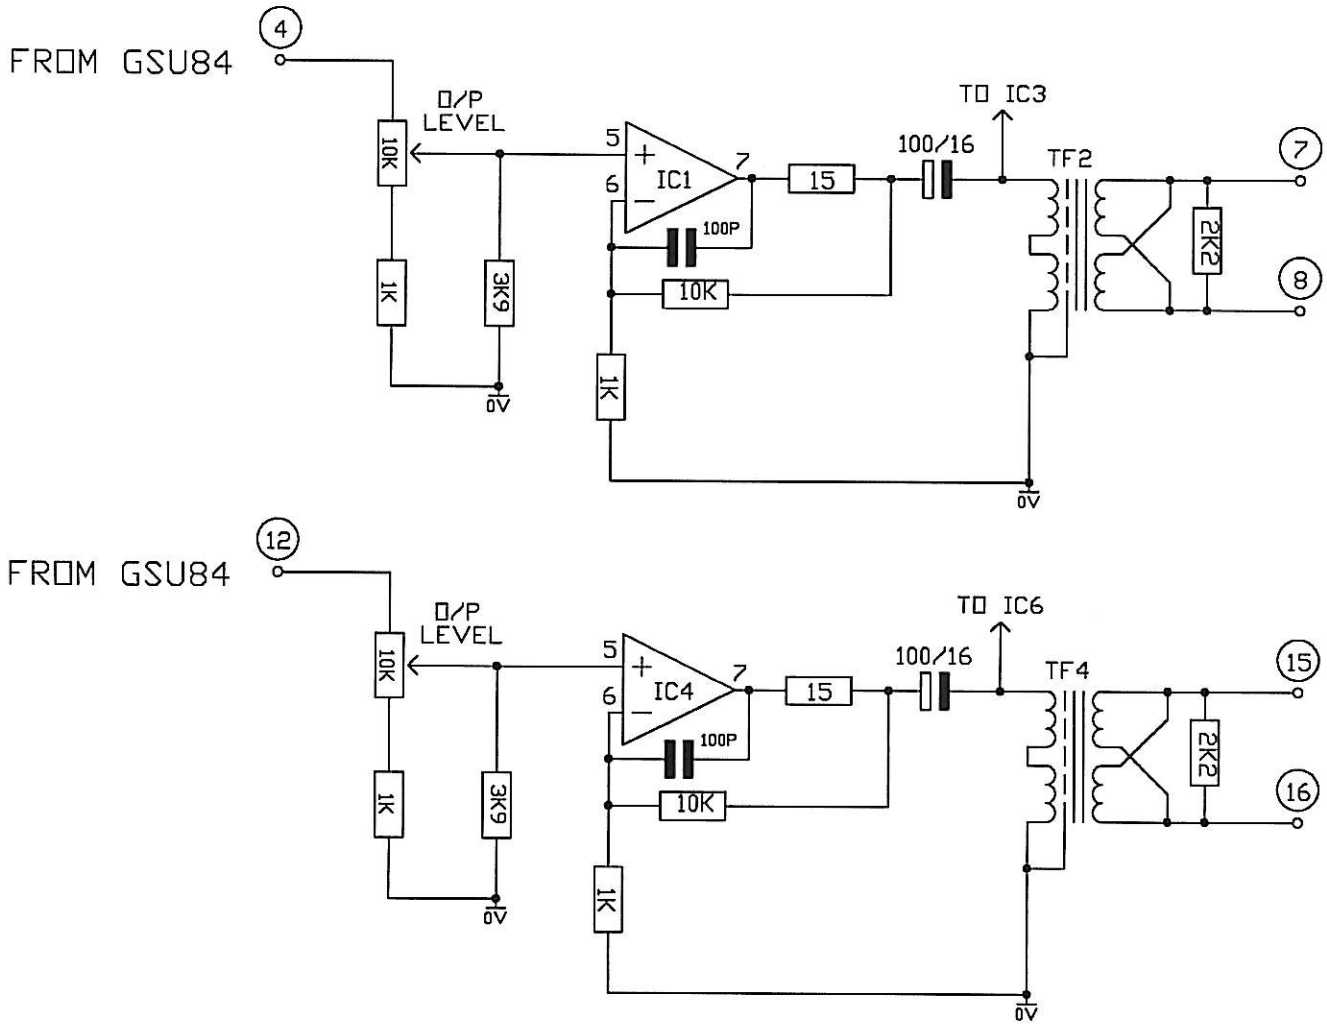

NOTES

(NO) = SOLDER PIN NO

IC1&4 = IC33178


TF2&4 = 1+1:2+2

© 2007

GLENSOUND ELECTRONICS LTD

GSU83 OUTPUTS CIRCUIT DIAGRAM

ISSUE	DATE	DRAWING NUMBER
1	12/10/07	A4-16002
		ORIGINALLY DRAWN USING AUTOTRAX

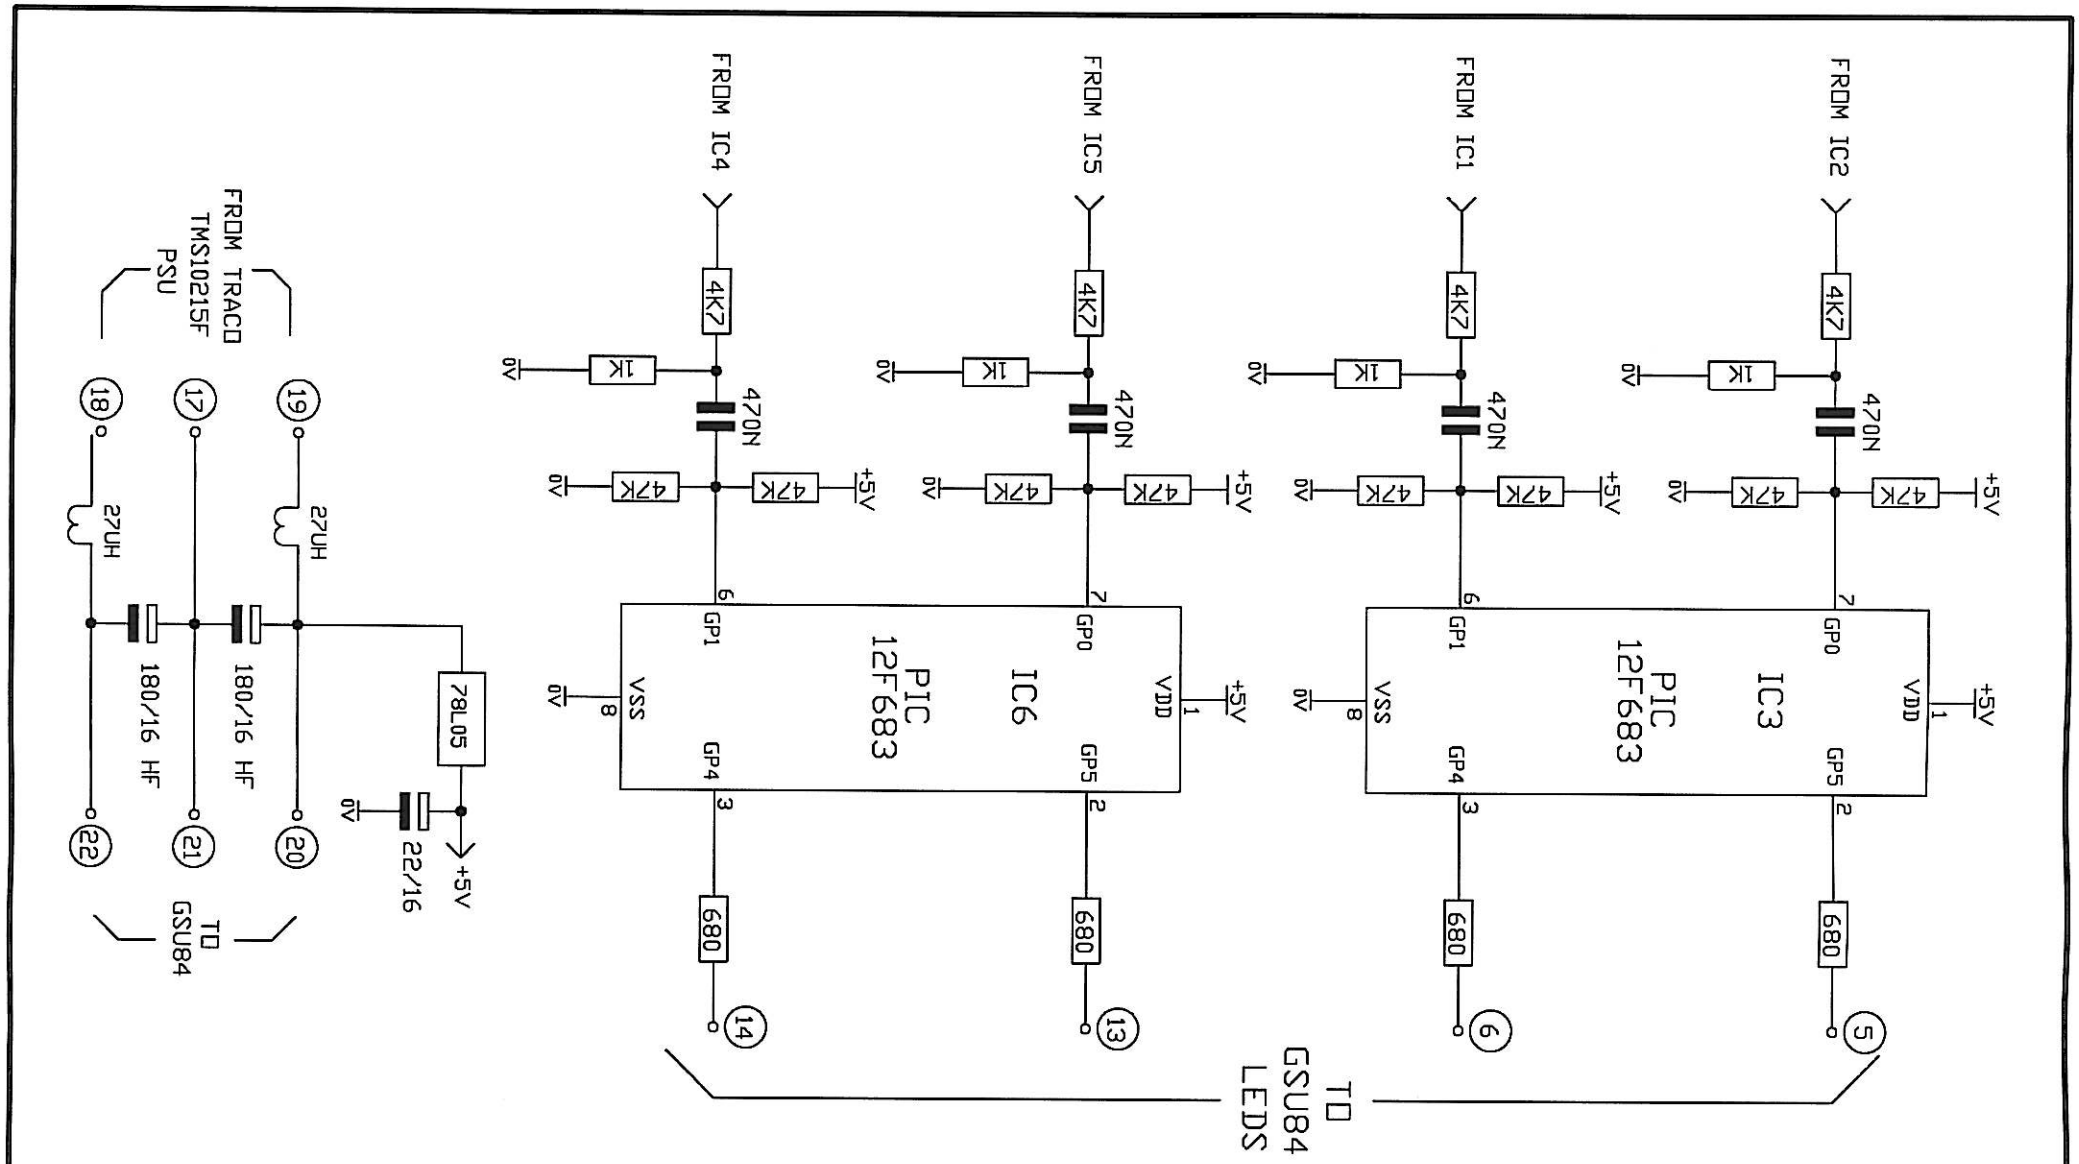

© 2007

GLENSOUND
ELECTRONICS LTD


GSU83 PIC
CIRCUIT DIAGRAM

ISSUE	DATE
1	12/10/07

DRAWING NUMBER

A4-16004

ORIGINALLY DRAWN USING AUTOTRAX

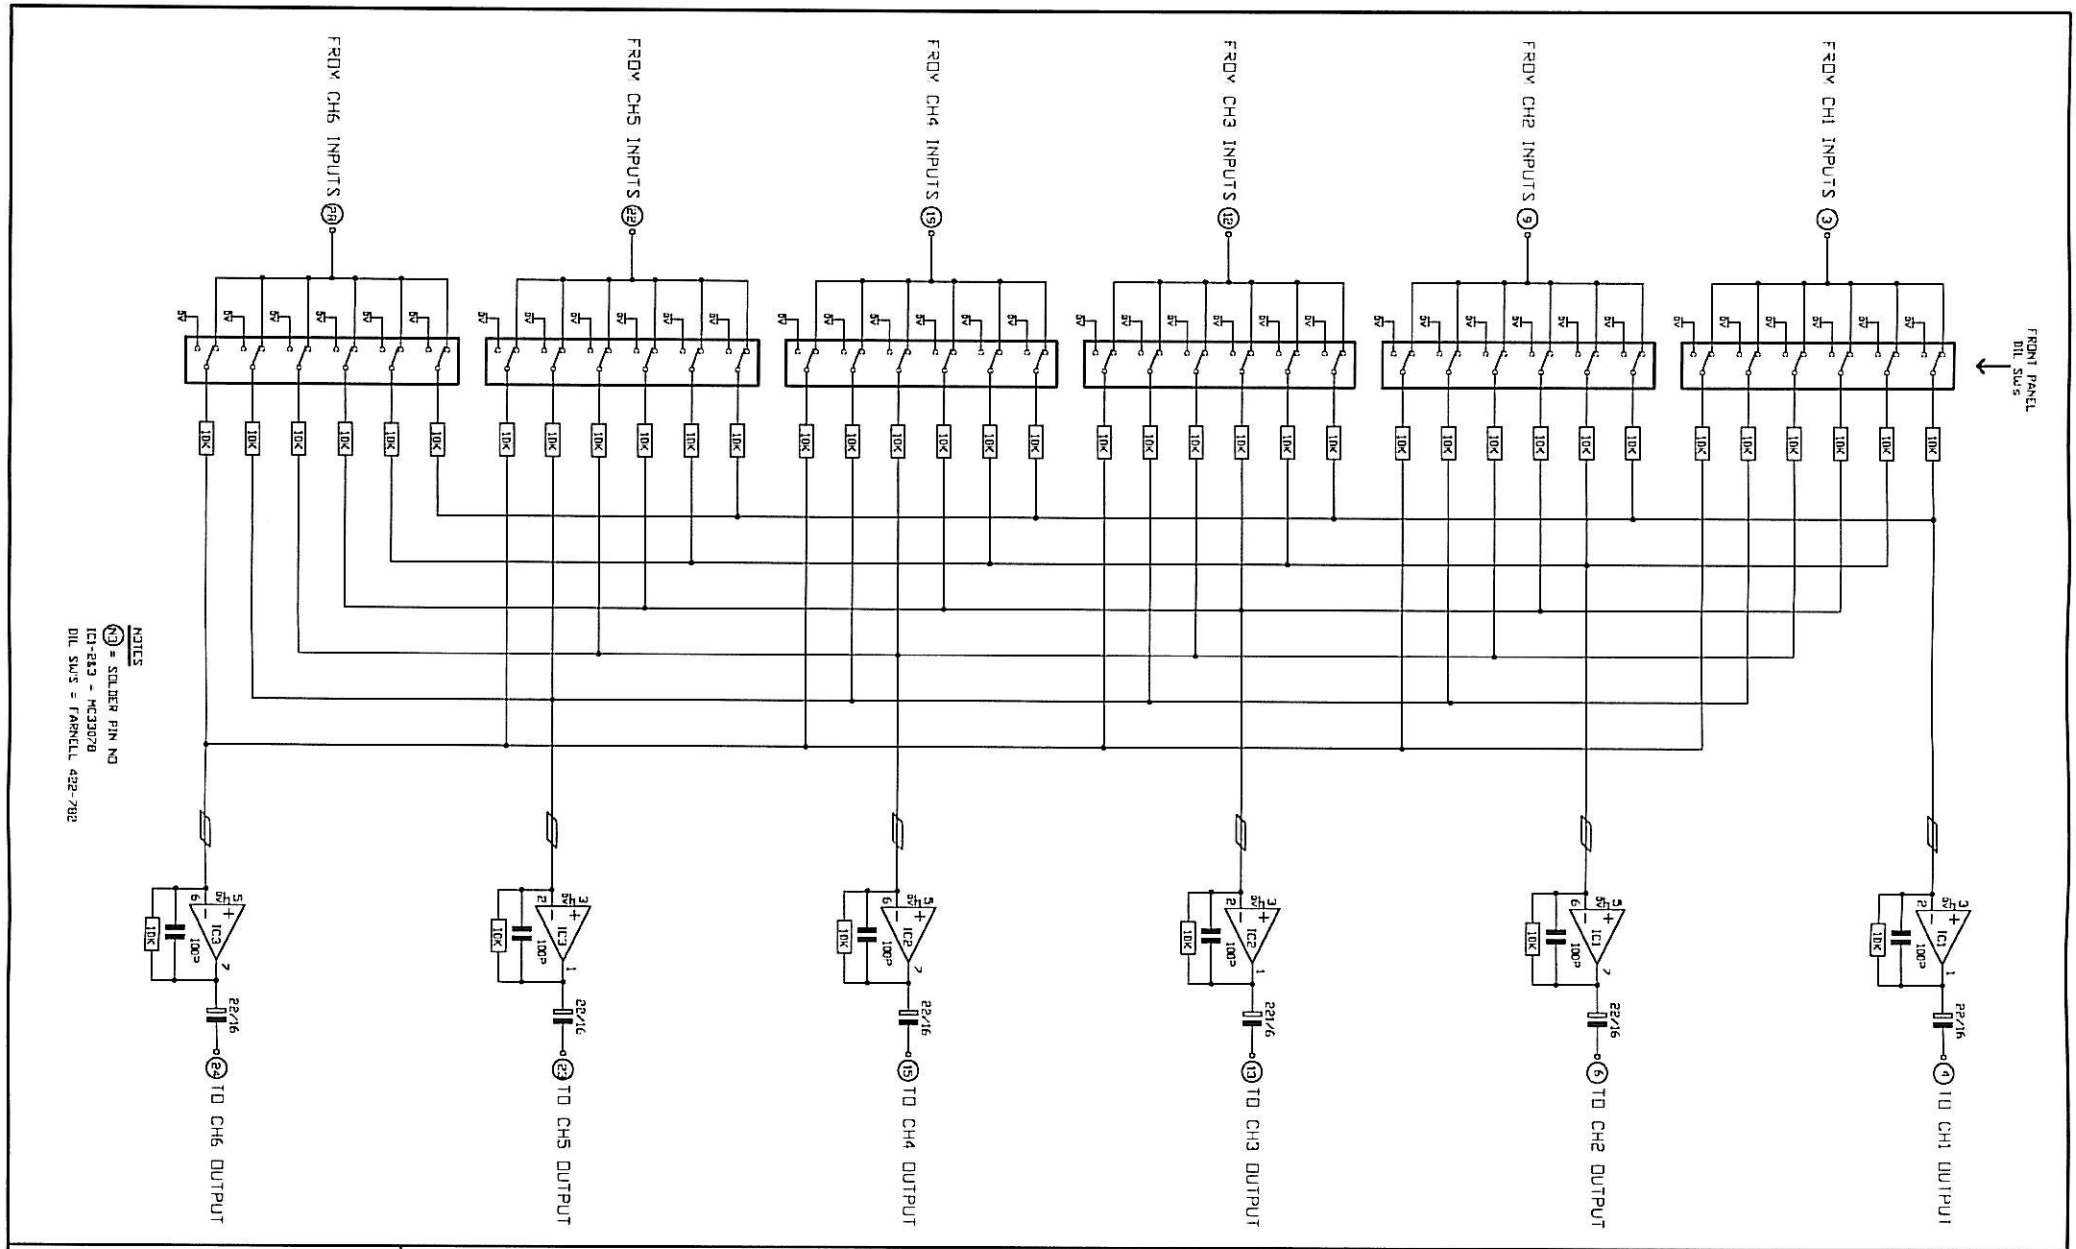

© 2007

GLENSOUND ELECTRONICS LTD

GSU84
SOURCE SELECT & MIX
CIRCUIT DIAGRAM

ISSUE	DATE	DRAWING NUMBER
1	12/10/07	A2-16006
		DRAWN BY: CJH
		ORIGINALLY DRAWN USING AUTOTRAX